

Postup pro změnu měřicího módu elektroměru PRO380:

S0 output per code							
Code	C-01	C-04	C-05	C-06	C-09	C-10	C-11
Forward	10		10	10	10	0	0
Reverse		12	12	12	12	2	2

7.11.1 How to change the combination code

- Scroll with the buttons to Program mode 3.
- Hold the right button for 3 seconds to enter the menu.
- Enter the 4 digit password: scroll with the buttons and select each digit 0-9, hold the right button for 3 seconds to confirm each digit.
- Scroll to LCD page Combination code (Code-xx).
- Hold the right button for 5 seconds to enter program mode. The value starts blinking: select 01/04/05/06/09/10/11.
- Confirm the new setting by holding both buttons for 3 seconds.
- The LCD will show OK when the setting is confirmed.

